

TM201

USB INTERFACE DEVICE FOR UTM II /UTMV




Suitable torque meter **UTM II** **UTMV**

- Variations of torque, rotation speed, and power* can be monitored and saved on PC. (Application software can be downloaded from our website for free)
- Maximum, minimum, and average value can be displayed.
- Measurement (numeric) data are automatically saved in CSV format.
- The unit supplies electric power to UTM II /UTMV.
- Two cables are attached: one for UTM II /UTMV and the other for PC.

* Power (W) = 2π × Torque (N m) × Rotation speed (rpm) / 60

Application example

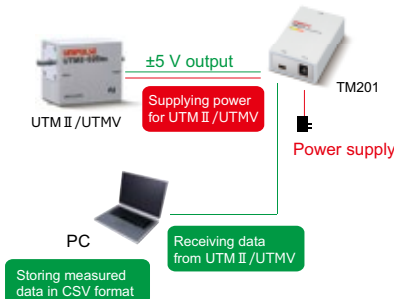


Specifications

UTM II /UTMV Interface	- Torque sensor input (voltage input) Signal input range -5 to +5 V Input impedance: 1 MΩ or more Accuracy Non-linearity: Within 0.02% FS±1 digit Zero drift: Within 0.2 mV/°C RTI Gain drift: Within 0.01%/°C Analog filter Primary low-pass filter 1 kHz (fixed) Digital filter Secondary low-pass filter fc = 3, 30, 300 Hz, OFF (depending on settings) Data output rate Speed: 300 times/sec. Resolution: 24 bit (binary) Effective resolution: Approx. 1/30000 against 5 V
	- Pulse input for rpm (input for open collector type) Maximum input frequency Conforming to the maximum rotation speed of UTM II /UTMV Minimum input frequency Selectable from 15, 10, 5, 3, or 2 rpm (when pulse rate is 4 ppr) Minimum pulse width Selectable from 60, 40, 20, 12, or 8 rpm (when pulse rate is 1 ppr) Circuit layout 50 μs No-voltage (dry) contact input (minus common) open collector outputs can be connected (Ic = Approx. 10 mA)
	- Power supply for UTM II /UTMV Power supply DC 24 V (UTM II /UTMV 1 unit)
Display	LED status light LED (Red): power supply/alarm status LED (Green): UTM II /UTMV is operating normally
Interface	USB
General performance	Power supply AC 100 to 240 V (+10% -15%) (free power source 50/60 Hz) * When supplied AC adapter is used Power consumption 4 W typ. (AC adapter) Operating conditions Operating temperature: 0 to +40°C Storage temperature: -10 to +60°C Humidity: 80% RH or less (non-condensing) Dimension 50(W) × 80(H) × 23(D) mm (Not including projections) Weight Approx. 120 g
Attachments	Setup guide:1 AC adapter for TM201 1.8 m1 Cable for connecting UTM II /UTMV 2 m1 miniUSB -USB cable 1.8 m1
Optional accessories	CA81-USB: miniUSB-computer USB cable 1.8 m (Same as the attachment) CATM21-M: Cable for connecting UTM II /UTMV 2 m (Same as the attachment) CATM51-M: Cable for connecting UTM II /UTMV 5 m CN90: Waterproof plastic connector for UTM II /UTMV TM201 AC PIN EU: Switching AC PIN (EU)
CE marking certification	EMC directives EN61326-1 Safety standard EN62311 Please specify requirement for CE marking certified product when making your order.

External dimension


Unit: mm

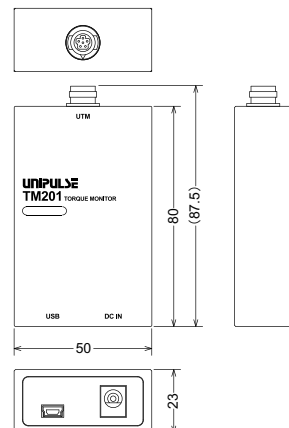

Application software for USB interfaces

- Supporting USB interface option for TM201, TM400, TM700, TM301, TM320, TM380, and TC80.
- Enabling real-time display of torque measured by UTM III /UTM II /UTMV, parameter settings, calibration, and data recording in CSV format. (UTM III can only use TM320, TM380 & TC80)

Software for USB interfaces for TM201

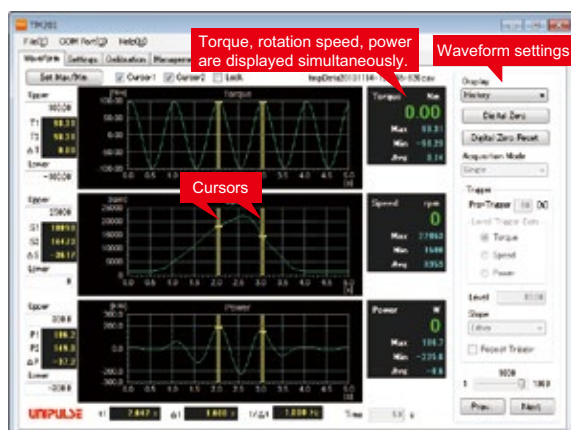

* PC software can be downloaded from UNIPULSE website.

Waveform settings

Change settings of waveform display and/or data

(1) Display mode

Normal: Waveforms currently acquired are displayed

History: Waveforms previously saved are displayed

(2) Acquisition mode

Single: Once "Start" button is clicked, waveform data is acquired for pre-set time period.

Repeat: "Single" mode operation will repeat in cycle until "stop" button is clicked.

Hold trigger (Only with TM301, TM320 and TM700): Data is acquired when "Hold" button is clicked.

Level trigger*: Pre-trigger (0 to 99), trigger data (torque, rotation speed, power),

Level (±99999), Trigger slope (positive, negative, either),

Repeat trigger (Standby & wait for another trigger after waveform acquisition)

* Depending on the torque monitors, the function varies. See Help of each software.

Cursor

Move two cursors freely, display each data value and their difference

Zoom-in display (TM201, TM301, TM320, TM400 & TC80)

Zoom-in display at any area